

ERROR CODES	DESCRIPTION
01	The coffee grinder is blocked (grinder blades jammed or sensor not reading properly)
02	The grinder is disconnected (Only coffee grinder without electronic sensor)
03	The brew unit is blocked in work position*
04	The brew unit is blocked in home position*
05	Water circuit / flow meter problems (water circuit blocked or no flow meter signal)
10	Boiler temperature sensor short circuited
11	Boiler temperature sensor open circuit
14	The boiler temperature has exceeded the maximum allowed value (165°c)
15	<p>The boiler temperature does not increase in the time established by the software. Possible root casues:</p> <ol style="list-style-type: none"> <li>1. Boiler power supply disconnected;</li> <li>2. Incorrect boiler assembled (see Exploded View);</li> <li>3. Partial power supply to boiler;</li> <li>4. Triggered thermostats.</li> </ol>
19	The machine does not receive the necessary voltage (power surges)
22	interface missing or unknown
23	The Espresso/Coffee lever was damaged or disconnected